

Field Range



Oven pilot lighting or relighting is to be completed as follows:

1. Turn the thermostat knob to "OFF" position and wait for 5 minutes.
2. Open the oven's lower kick plate by lifting up and out.
This exposes the pilot valve and the igniter button.
3. Make sure accumulated gas if any has dispersed. Since propane gas is heavier than air, check near the floor area for the odor of propane gas before attempting to light any pilot burner.
4. Depress the red button on the safety valve and hold it in, throughout the lighting procedure.
5. Press the red button of the pilot ignitor and you should hear a snap and see a spark at the pilot burner. If a spark or spark ignitor is not present apply a lit match to the pilot burner head.
6. Continue to depress the safety valve button until the pilot remains lit when released. If pilot is extinguished, repeat steps 4 through 6 above.
7. Turn the oven thermostat knob "ON" and set to desired temperature setting, watch to make sure the oven burner ignites from the pilot and that there are no yellow flames from the burner.
8. Turn the oven thermostat to the "OFF" and replace the lower kick plate.