

# Convection Oven



## **\*\*ELECTRICAL CONNECTION**

Bakers Pride CONVECTION OVEN requires a 120 volt supply to operate the ignition system and circulating fan. The supply cord provided along with the appliance is equipped with a three prong (grounding) plug for protection against shock hazard. The electrical service in the building must be equipped with a properly grounded three prong receptacle.

Check all gas connections for leaks with a soapy water solution before lighting any pilots. **DO NOT USE AN OPEN FLAME TO CHECK FOR LEAKS!** Putting an open flame beside a new gas connection is extremely dangerous.

## **Initial Starting**

1. Turn the thermostat dial to the "OFF" position. Place the power switch to the "OFF" position.
2. Wait five minutes.
3. Place power switch to the "ON" position. Turn the oven thermostat to the desired temperature.
4. For a complete shutdown, place the thermostat and power switch in the "OFF" position.