

POPCORN MACHINE



OPERATIONAL TIPS



SWITCHES

- a. LIGHT AND WARMER SWITCH – TURNS ON HEAT LAMP AND OPTIONAL STRIP HEATER UNDER CORN PAN.
- b. KETTLE MIXER SWITCH – TURNS ON MOTOR THAT DRIVES KETTLE AGITATOR SHAFT.
- c. KETTLE HEAT SWITCH – TURNS ON HEAT ELEMENT INSIDE KETTLE.

***NOTE: DO NOT COVER AIR VENT HOLE! MOTOR AIR INTAKE AND EXHAUST HOLES ARE LOCATED AT TOP OF MACHINE AND MUST BE KEPT CLEAR OF ANY OBSTRUCTIONS.**

***AVOID SERIOUS BURNS!!! DO NOT TOUCH THE KETTLE WHILE IT IS HOT.**

1. TURN ON KETTLE HEAT SWITCH AND KETTLE MOTOR.
2. “TEST POP” A KETTLE OF CORN: PLACE OIL MEASURE IN KETTLE WITH 3 CORN KERNELS; ONCE KERNELS HAVE BEGUN POPPING, PLACE REMAINDER OF OIL IN KETTLE AND CLOSE LID.
3. WHEN CORN HAS POPPED, ROTATE HANDLE TO EMPTY KETTLE; RETURN KETTLE TO UPRIGHT POSITION.
4. REPEAT THIS CYCLE; SUBSEQUANT BATCHES ARE ALWAYS MORE FLAVORFUL THAN INTIAL BATCH.
5. TURN OFF KETTLE HEAT SWITCH ON THE FINAL BATCH WHEN POPCORN BREAKS OVER THE LID OF THE KETTLE TO ELIMINATE SMOKE AND ODOR.
6. TURN OF KETTLE HEAT AND KETTLE MOTOR SWITCHES.
7. WIPE EXTERIOR OF KETTLE WITH HEAVY CLOTH AFTER COOLOING OF KETTLE TO PREVENT BURN OR STAIN OF OIL DRIPPING.

TO CLEAN

- 1- ALLOW KETTLE TO COOL UNTIL WARM ENOUGH TO HANDLE.
- 2- UNPLUG KETTLE AND REMOVE FROM MACHINE.
- 3- WIPE KETTLE, KETTLE LID, CROSSBAR, AND EXTERIOR CLEAN.
 - a. **DO NOT** IMMERSE KETTLE IN WATER!!
- 4- REMOVE POPPED CORN AND PLACE IN BAGS.
- 5- REMOVE “OLD MAID” PAN EMPTY UNPOPPED KERNELS AND WIPE CLEAN.
- 6- WIPE INTERIOR OF MACHINE CLEAN.
- 7- RETURN THE MACHINE CLEAN TO AVOID CLEANING CHARGES.