

COFFEE MAKERS



1. MUST BE PLUGGED DIRECTLY INTO A GROUNDED THREE PRONGED OUTLET.
2. DO NOT USE WITH ADAPTERS OR EXTENSION CORDS.

OPERATING TIPS

1. FILL COFFEE MAKER TO DESIRED LEVEL WITH COLD WATER
2. ADD COFFEE ACCORDING TO MANUFACTURERS RECOMMENDATIONS OR CHART BELOW.
3. PLUG COFFEE MAKER INTO PROPER ELECTRICAL OUTLET.
4. REMOVE COFFEE GRINDS ONCE COFFEE HAS FINISHED BRWEING.



BREWING TIMES

30-60 CUPS	60 MINUTES
90-100 CUPS	90 MINUTES

COFFEE EQUILVALANTS

NUMBER OF CUPS	COFFEE MEASURE
30	2 CUPS
55-60	3.5 CUPS
90	6 CUPS

***NOTE:** 1LB OF COFFEE IS EQUAL TO 4.75 CUPS OF GROUND COFFEE

CLEANING INSTRUCTIONS

1. RINSE COFFEE MAKER BEFORE RETURNING.
2. NEVER IMMERSE COFFEE MAKER IN WATER.